


# INSTALLATION INSTRUCTIONS

## Front Fender Trim (53440-24A01)

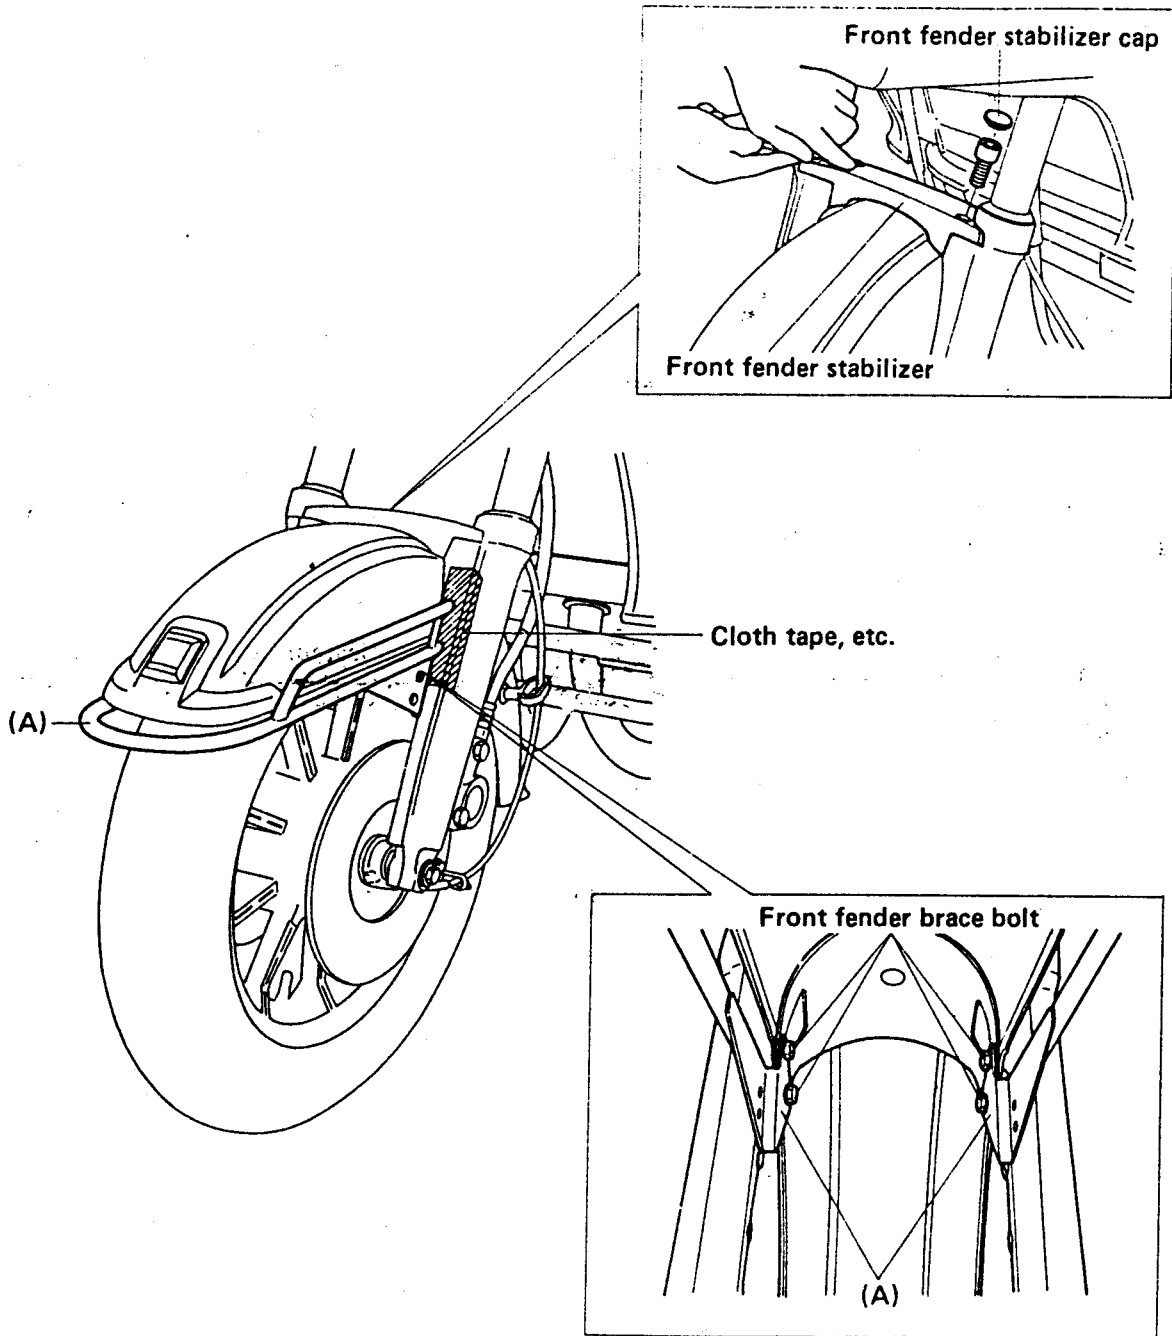

Letter	Qty	Description
A	1	Front Fender Trim

## Front Fender Trim 53440-24A00

1. Remove four front fender stabilizer caps and, using a hex. wrench, remove the stabilizer.
2. Remove two bolts each on both right and left sides to remove the caliper.
3. Pull out the front axle cotter pin and remove the axle nut and speedometer cable.
4. Pull out the axle bolt and remove the front wheel together with the speedometer drive gear box and flat washer.
5. Remove the four bolts of the front fender brace tightened together with the front fender inside. Insert the bolts into the front fender trim, the front fender brace and the fender in this sequence and tighten them to the front fork.

**Note:** In this work, use a cloth tape or similar type of tape over any place to which the front fender trim might touch for good protection so that the front fork is not scarred.

6. Install to the fork the flat washer, the speedometer drive gear box and the front wheel with the axle bolt. Then, tighten the axle nut and secure it with the cotter pin.

**Note:** The cotter pin should be replaced with new one.

7. Reinstall both caliper and the stabilizer reversing operation # 2 and # 1.