

### Travel Trunk Rack 95830-24A00

1. Open the travel trunk to remove the mirror mounted inside.
2. Place cloth tape temporarily on bracket edges to prevent scratching. Determine the places to install the travel trunk rack by placing the rack on the travel trunk and mark off the center points of bolt holes.
3. Drill holes 10.5mm (0.41in.) in diameter at the places marked off.
4. Install the travel trunk rack as shown in the Figure 2.
5. Install the mirror removed in the step 1.

**WARNING: Never load the Travel Trunk Rack with more than 2kg (4.4lbs) of cargo.  
Loading more weight on the rack could cause an unsafe riding condition.**

# INSTALLATION INSTRUCTIONS

## Travel Trunk Rack (95830-24A00)

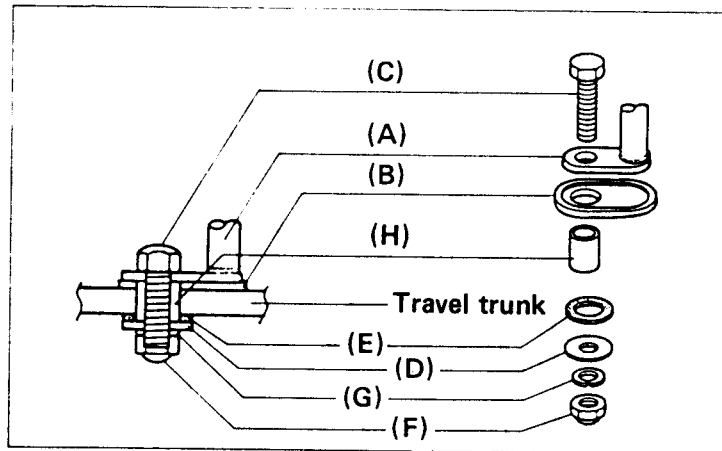


Fig. 1

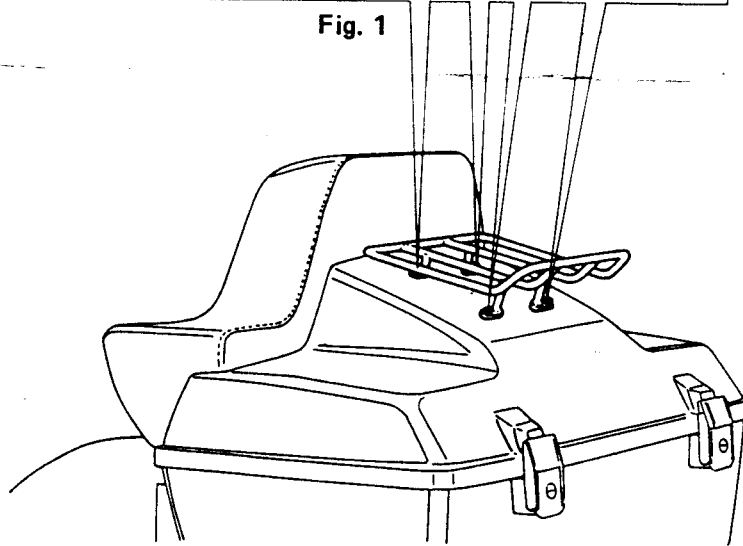


Fig. 2

Letter	Qty	Description	Letter	Qty	Description
A	1	Travel Trunk Rack	E	4	Rubber Washer
B	4	Seat Packing	F	4	6mm Crown Nut
C	4	6 x 20mm Crown Bolt	G	4	Spring Washer
D	4	Flat Washer	H	4	Spacer